

Disney Princess Remote Tutorial



Before playing Disney Princess Dream, Journey for the first time, you will need to program the Princess Remote so that your DVD player will recognize it.

First, your Princess Remote requires two AAA batteries.

Once the batteries are installed properly, you're ready to begin programming your Princess Remote. You will also need your DVD player's remote control to complete the process.

First, lift the back door on your Princess Remote. Underneath you will see the "set" button. Press this button and then let go. The red LED light on the Princess Remote will come ON.

Next, place the Princess Remote down on a flat surface, and then place your DVD's remote control in front of it so they are looking at each other "eye-to-eye." The heart shape on the Princess Remote is on the same end as the "eye." Leave a few inches of space between the remotes.

Now, press and hold the star button on your Princess Remote. The red LED light will go OUT, but Keep holding down the "Star" button. Then press and hold the "enter" button on your DVD remote. The red light on the Princess Remote will flicker. That means they're talking, but keep holding both buttons down until the red light on the Princess Remote stays on with a steady glow. That means they've finished their conversation. You may now let go of both buttons.

And your reward for successfully completing these steps is... to do it again! You need to repeat the steps twice for each button you program – this makes sure that the princess Princess Remote will work with almost any DVD player. Think of it as an electronic "Rinse and Repeat."

So, again press and hold the "star" button on the Princess Remote. The red light will go OUT, but Keep holding down the "star" button. Then press and hold the "enter" button on your DVD remote controller. The red light on the Princess Remote will flicker, but keep holding both buttons down until the red light on the Princess Remote stays on with a steady glow. You may now let go of both buttons. The "star" button should now be programmed correctly.

Now, let's move on to the up arrow button. Begin by pressing and holding the up arrow button on the Princess Remote. The red light will go out, but Keep holding down the up arrow button. Now, press and hold the up arrow button on your DVD remote. Keep holding both buttons down until the red light on the Princess Remote stays on with a steady glow. You may now let go of both up buttons.

Again, duplicate all the steps for the Up Arrow button – remember "rinse and repeat!" Ready. Let's do it...again! Press and hold the up arrow button on the Princess Remote. The red light will go out, but Keep holding down the UP arrow button. Now, press and hold the up arrow button on your DVD remote. Keep holding both buttons down until the red light on the Princess Remote stays on with a steady glow. You may now let go of both up arrow buttons.

Now, let's move on to the down arrow button. Begin by pressing and holding the down arrow button on the Princess Remote. The

red light will go out, but Keep holding down the down arrow button. Now, press and hold the down arrow button on your DVD remote. Keep holding both buttons down until the red light on the Princess Remote stays on with a steady glow. You may now let go of both buttons.

Again, duplicate all the steps for the Down Arrow button – remember "rinse and repeat!" Ready. Let's do it...again! Press and hold the down arrow button on the Princess Remote. The red light will go out, but Keep holding down the Down arrow button. Now, press and hold the down arrow button on your DVD remote. Keep holding both buttons down until the red light on the Princess Remote stays on with a steady glow. You may now let go of both buttons.

Now, let's move on to the right arrow button. Begin by pressing and holding the right arrow button on the Princess Remote. The red light will go out, but Keep holding down the right arrow button. Now, press and hold the right arrow button on your DVD remote. Remember, the right arrow button on your DVD remote will be on the opposite side from the Princess Remote's right arrow button as the two are facing one another. Keep holding both buttons down until the red light on the Princess Remote stays on with a steady glow. You may now let go of both right buttons.

Again, duplicate all the steps for the Right Arrow button – remember "rinse and repeat!" Ready. Let's do it...again! Press and hold the right arrow button on the Princess Remote. The red light will go out, but Keep holding down the right arrow button. Now, press and hold the right arrow button on your DVD remote. Keep holding both buttons down until the red light on the Princess Remote stays on with a steady glow. You may now let go of both right buttons.

Next is the Left Arrow button. Begin by pressing and holding the left arrow button on the Princess Remote. The red light will go out, but Keep holding down the left arrow button. Now, press and hold the left arrow button on your DVD remote. Remember, the left arrow button for your DVD remote will be on the opposite side from the Princess Remote's left arrow button as the two are facing one another. Keep hold both buttons down until the red light on the Princess Remote stays on with a steady glow. You may now let go of both left buttons.

Now, let's repeat the steps for the Left Arrow Button. Press and hold the left arrow button on the Princess Remote. The red light will go out, but Keep holding down the left arrow button. Now, press and hold the left arrow button on your DVD remote. Keep holding both buttons down until the red light on the Princess Remote stays on with a steady glow. You may now let go of both left buttons.

Great! Now you've programmed all five buttons on the Princess Remote, finish the process by pressing and letting go of the "set" button. The red light will go OUT. Close the back door.

